

why^{EVO} NEW

DUPLICATING PROCEDURES

VERSION
15



why EVO NEW



**NEW DESIGN
BI-COMPONENT MOLD**




ANTI-SHOCK



**DOUBLE LED
green - red**




**INTENSIFIED POWER
SIGNAL**

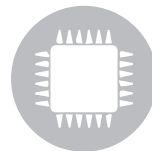


**GROWN
COMPATIBILITY LIST**

Totally enriched, in detail well-finished, honouring the original design that gave the success obtained till today.

An important news has been represented by a default integration, on each button, of a 64 bit Sice Rolling code. This allows to use the WHY EVO remote controls as a first installation in combination with one of our SICE Tech multifrequency receiver. The further copies and its insertion on the receiver happen simply and directly.

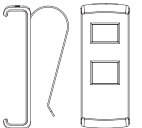Available on request
why | visor clip 
cod. 8999966

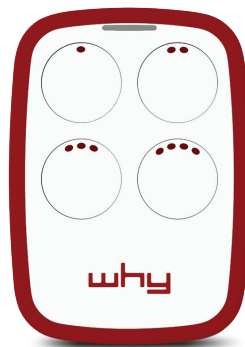

why licorice black
cod. 4791010



why magnolia white
cod. 4791011



why granade red
cod. 4791012




why sky blue
cod. 4791013



BEST POSITION FOR THE DUPLICATION



1-3 cm

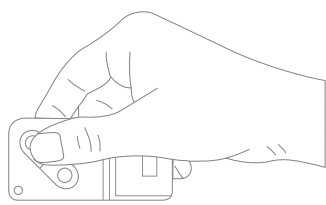

IT IS RECOMMENDED:

TO REALIZE A CORRECT DUPLICATION OF THE REMOTE CONTROLS, WE RECOMMEND TO FOLLOW THE PROCEDURES HERE BELOW TAKING CARE TO DISTANCE YOURSELF BY TOOL THAT CAN GENERATE FREQUENCY TROUBLES AS:

- CORDLESS
- WI-FI VIDEO SURVEILLANCE DEVICES
- MOBILE PHONES, SMARTPHONES OR TABLETS
- WI-FI OR BLUETOOTH ACTIVATED IN YOUR COMPUTERS
- ELECTRONIC MOTOR
- NEON LIGHTS
- WIRLESS DEVICES FOR BACK END MANAGEMENT IN THE BUSINESS STORES

1. While pressing the button 1 of the "WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY EVO RED LED emits a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance (as shown in the picture).
4. Press and retain pressed the button of the original remote control and wait for a change flash (as a faster flash) of WHY EVO RED LED and a change of its color (GREEN) that confirms the correct learning of code. This step may take a few seconds.
5. While the GREEN LED is flashing, press the button of the "WHY EVO" where you want to program the code just learnt, and retain pressed until the LED switches off. This step may take some seconds.
6. The copy has been happened with success. Now check on the automation the correct functioning of the new WHY EVO remote control.

Notes:

- If the RED LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY EVO memory is completely re-writable.
- To duplicate further buttons of WHY EVO, please repeat the operation from the step 1.

1. While pressing the button 1 of the "WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY EVO RED LED will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-2 cm of distance (as shown in the picture).
4. Press and retain pressed the button of the original remote control and wait for a change flash (as a faster flash) of WHY EVO RED LED and a change of its color (GREEN) that confirms the correct learning of code. This step may take a few seconds.
5. While the GREEN LED is flashing, press the button of the "WHY EVO" where you want to program the code just learnt, and retain pressed until the LED will switch off.
6. The copy has been happened with success.
7. Activate now the correct procedure for the programmed model and insert the new remote control on the receiver (see the compatibility list present in this manual).

Notes:

- If the LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY EVO memory is completely re-writable.
- To duplicate further buttons of WHY EVO, please repeat the operation from the step 1.

To activate the remote control on the receiver for models marked with  proceed as below:

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button during 10 seconds, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

To activate on the receiver all the other models: Refer you to the instructions of the original model.


NOTE: THE SEED CODE OF THE WHY EVO CAN BE EMITTED AS HERE BELOW:

1. Press the buttons 1 and 2 simultaneously for 8 seconds and release them when the LED start to flash;
2. While the LED is flashing press the button with the seed code needed.

ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".


BFT



1. While pressing the button 1 of the "WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY EVO RED LED will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance (as shown in the picture).
4. Press and retain pressed the button to be programmed of the original remote control, till the RED LED will switch on as a fix light; now release the button.
5. The WHY EVO RED LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.
6. Transmit now the SEED CODE of the BFT original remote control, using a pin, press the rear hide button (see the picture) or, according to the new references, press the 1 and 2 buttons until the original remote control LED switches on. (see the picture)
7. Now the WHY EVO RED LED will change the flash mode (more fast) and a change of its color (GREEN), for a reconfirmation of the correct code learning. This step may take some seconds.
8. At this moment, press the WHY EVO button when you want to store the code and retain pressed until the WHY EVO LED switches off.
9. Activate now the  procedure to insert the new remote control on the receiver.

V2 433 - 868



1. While pressing the button 1 of the "WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY EVO RED LED will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance (as shown in the picture).
4. Press and retain pressed the button to be programmed of the original remote control, till the RED LED will switch on as a fix light; now release the button.
5. The WHY EVO LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.
6. Transmit now the SEED CODE of the V2 original remote control pressing at the same time 1 and 2 buttons.
7. Now the WHY EVO RED LED will change the flash mode (more fast) and a change of its color (GREEN), for a reconfirmation of the correct code learning. This step may take some seconds.
8. At this moment, press the WHY EVO button when you want to store the code and retain pressed until the WHY EVO LED switches off.
9. Activate now the  procedure to insert the new remote control on the receiver.

To activate the remote control on the receiver for models marked with  proceed as below:

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button during 10 seconds, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

To activate on the receiver all the other models: Refer you to the instructions of the original model.

NOTE: THE SEED CODE OF THE WHY EVO CAN BE EMITTED AS HERE BELOW:

1. Press the buttons 1 and 2 simultaneously for 8 seconds and release them when the LED start to flash;
2. While the LED is flashing press the button with the seed code needed.

ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".

FAAC 
433 - 868




GENIUS 
433 - 868



Attention: verify the programming remote control is a MASTER.

Pressing whatever button, the LED has to emit a double flash rather than to switch on as a fixed light.


1. While pressing the button 1 of the "WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY EVO RED LED will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance.
4. Press and retain pressed the button to be programmed of the original remote control, till the LED will switch on as a fix light; now release the button.
5. The WHY EVO RED LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.
6. Predispose the FAAC/GENIUS remote control for the SEED CODE emission. Press at the same time the 1 and 2 buttons (note: THESE ARE THE BUTTONS OF THE DIAGONAL LINE as in the picture).

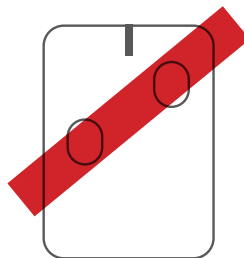

7. While FAAC/GENIUS remote control LED flashes, place it in front of WHY EVO at a distance of 1-3 cm and press the button to be programmed until the WHY EVO RED LED will change the flash mode (more fast) and a change of its color (GREEN), for a reconfirmation of the correct code learning. This step may take some seconds.
8. At this moment, press the button when you want to store the code and retain pressed until the WHY EVO GREEN LED, switches off.
9. The copy has been happened with success. Now check on the automation the correct functioning of new WHY EVO remote control pressing two times the copied button.


Notes:

 - If the RED LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY EVO memory is completely re-writable.
- To duplicate further buttons of WHY EVO, please repeat the operation from the step 1.





 1. While pressing the button 1 of the "NEW WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the RED LED of "NEW WHY EVO" will emit a short flash every 2 seconds.
3. Place the "SOURCE WHY EVO" in front of the "NEW WHY EVO", at about 1-2 cm of distance (as in the picture 3 at the page 3).
4. Press and retain pressed the button to be programmed of the "SOURCE WHY EVO"


NOW IF THE CODE IN THE "SOURCE WHY EVO"



IS A FIXED OR ROLLING-SIMPLE CODE

IS A ROLLING-COMPLEX CODE

- 5a wait for a change flash (as a faster flash) of "NEW WHY EVO" RED LED and a change of its color (GREEN) that confirms the correct learning of code. This operation may take some seconds.
- 6a While the GREEN LED is flashing, press the button of the "NEW WHY EVO" where you want to program the code just learnt, and retain pressed until the LED will switch off.
- 7a The copy has been happened with success. Now check on the automation the correct functioning of NEW WHY EVO remote control pressing directly the button where the code has been programmed. If it will not work, please proceed with the insertion on the receiver of the NEW WHY EVO, through the  function, if it is present, or through  the procedures given by the automation manufacturer.

- 5b. The WHY EVO RED LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.
- 6b. Transmit now the SEED CODE of the "SOURCE WHY EVO" pressing at the same time 1 and 2 buttons for 3 seconds till the switch on of RED LED. While the LED is flashing, (within 10 seconds) pressing and retain pressed the button where you want to program the SEED CODE.
- 7b. Now the RED LED of the "NEW WHY EVO" will change the flash (more fast) and color (GREEN) to confirm the correct learning of the code. This step may take some seconds.
- 8b. At this moment, press the NEW WHY EVO button when you want to store the code and retain pressed until the WHY EVO GREEN LED, switches off.
- 9b. The copy has been happened with success. Now check on the automation the correct functioning of NEW WHY EVO remote control pressing directly the button where the code has been programmed. If it will not work, please proceed with the insertion on the receiver of the NEW WHY EVO, through the  function, if it is present, or through the procedures given by the automation manufacturer.

Notes:

- If the LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY EVO memory is completely re-writable.
- To duplicate further buttons of WHY EVO, please repeat the operation from the step 1.

TO MAINTAIN THE SAME SERIAL NUMBER OF A ROLLING REMOTE

1. While pressing the button 2 of the WHY EVO, at the same time press 4 times the 1 button.
2. Release both buttons. Now the RED LED "WHY EVO" will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance (as shown in the picture at the page 3).
4. Press and retain pressed the button of the original remote control and wait for a change flash (as a faster flash) of WHY EVO RED LED and a change of its color (GREEN).
5. Choice the button where you want to program the frequency and press it. This step may take some seconds.
6. The copy has been happened.
7. Activate now the correct procedure for the copied model and insert the new remote control on the receiver (see the compatibility list present in this manual).
8. Repeat this procedure for the other buttons, if necessary.

PROGRAM A ROLLING CODE ON EACH BUTTON WITH A SERIAL NUMBER

1. While pressing the button 4 of the WHY EVO, at the same time press 4 times the 1 button.
2. Release both buttons. Now the RED LED "WHY EVO" will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance (as shown in the picture at the page 3).
4. Press and retain pressed the button of the original remote control and wait for a change flash (as a faster flash) of WHY EVO RED LED and a change of its color (GREEN).
5. Choice the button where you want to program the frequency and press it. This step may take some seconds.
6. The copy has been happened.
7. Activate now the correct procedure for the copied model and insert the new remote control on the receiver (see the compatibility list present in this manual).

LEGEND:



WHY SYNC TECHNOLOGY



ACT ON THE RECEIVER



DIRECT FUNCTIONING

ACM TX2, TX2 COLOR, TX4		DITEC/ENTREMATI BIXLP, GOL4, BIXLG, ZEN		NICE SMILO, FLOR-S, VERY-VR, FLOR-S ERA, ONE (ON), ON ERA, INTI, ERGO, PLANO, ONE (ON FM)		STAGNOLI KALLISTO, VENUS AV223	
ADYX TE4433H BLUE, 433-HG BRAVO		DOORHAN TRANSMITTER 4		NORMSTHAL RCU 2/4 K, EA 433 2/4 K		TAU 250K-SLIMRP, 250K-SLIMR, 250T-4RP	
AERF COMPACT, HY-DOM, MERCURI B, MERCURI C, SABUTON, MARS, SATURN, ST3/N, TERRA, TMP-1, TMP-2, UNITECH		DOORMATIC MILENY, MILENY-EVO		NORTON NEO, TXCD		TELCOMA FM400E, FM400	
ALLMATIC BROWN, BROWN RED, BRO.OVER, PASS, MINIPASS, TECH3, FOR4		ECOSTAR RSC, RSE, RSZ		NORTON GO NORTON, GO MINI NORTON		TOR LIFT TORMIT4	
APERIO GO, GO PRO, GO MINI		ERREKA IRIS, ROLLER 2, ROLLER 433, ROLLER 868, SOL433, SOL868, VEGA 433, VEGA 868		NOVOFERM MCHS, MICRO-NOVOTRON 502, MINI-NOVOTRON 504, MICRO-NOVOTRON 502, MICRO-NOVOTRON 504, MICRO-NOVOTRON 31, MICRO-NOVOTRON 51, MINI-NOVOTRON 30, MINI- NOVOTRON 50, MNHS, MINI NOVOTRON 522		V2 TSC, TXC, TRC, HANDY, PHOENIX, PHOX 433, PHOENIX 868, PHOX 868	
APERTO (Sommer) 4020-TX03-434, TX02-434-2, TX02-868-2		FAAC TML 433SLH, DL 868 SLH, XT 868 SLH, XT 433 SLH, T 868 SLH, T 433 SLH, XT 868 SLH BLACK, XT 433 SLH BLACK		O&O TX, T.COM R4-2, T.COM R8-2, TWIN, TX (NEO)		VDS ECO-R, TRQ P	
APRIMATIC TR, TM4, TXM		FAAC XT 433 RC, TE433HG, XT4 433 RCBE		PRASTEL MTE, MPSTLE, MPSTP2E, TCE, BFOR, TRQ-P, SLIM-E			
AVIDSEN 104251, 104250, 104250 OLD, 104250 RED, 104257, 104350, 654250, TX4 114253		FADINI JUBI-SMALL, JUBI 433, DIVO 71/4		PUJOL TWIN, VARIO, VARIO MARS, VARIO OCEAN, NEO			
BALLAN FM400, FM400E		GENIUS AMIGO JA332-JA334 868, AMIGOLD 868, KILO 433 JLC, KILO 868 JLC		RIB LITHIO			
BENINCA TO. GO, WV, TWW, ROLLKEY, APPLE, LOT WCV, CUPIDO, TO.GO. QV, HAPPY VA		GENIUS BRAVO, ECHO		ROPER NEO			
BENINCA IO, TO.GO. VA		GIBIDI AU1600, AU1600 WOOD, AU1680, AU1680 WOOD, DOMINO, MAKO		ROPER GO ROPER, GO MINI ROPER			
BFT MITTO, MITTO M, MITTO RCB, MITTO A, TRC, GHIBLI, MURALE, KLEIO		JCM NEO, TWIN		SABUTOM BROOVER, BROSTAR			
CARDIN TRQ S449, TRQ S449 GREEN (PRECODE), TXQ S449, TXQ S449 GREEN, TRQ S486, TXQ S486, S437 TX, XRADO		JCM GO, GO PORTIS, GO NORTON, GO MINI		SEAV BE HAPPY RS, BE SMART			
CASALI GENIUS/CASALI A252RC		KBLUE ETH-TEL01		SECULUX NEO			
CHAMBERLAIN/LIFT MASTER/MOTOR LIFT 953ESTD, 371 LM, 971LM, 84330E, 94334CE, 94333E/94334E/94335E, 9747E, 1A5639-7 ,1A5477,1A6487, 13282372, 94330EM- L/9333EML/94335EML, 84330EML/84333EM- L/84335EML, 8747EML		KEY 900TXB-42R, TXB 44R, SUB 44R		SILVELOX Mhz 2007, QUARZ SAW			
CLEMSA MUTANCODE, T, T-8, E-CODE N		KING GATES CLIPPER, STYLO		SIMINOR CVXNL, MITTO			
CLEMSA Attenzione! Codice Fisso MASTERCOD MV		KLING KUA, KUA E, KUA S		SIMINOR SIM433			
DASPI ZERO RC		LABEL SPYCO		SOMFY K-EASY, K-EASY NEW, K-EASY OLD, MITTO, KEY GO RTS, TELIS RTS, KEYTIS RTS, KEYTIS RTS NS, ALARMA			
DEA SYSTEM PUNTO 278, GOLDR, GENIE R 273, GENIE R-GT2M, MIO TR, GT2M, TRN		LIFE FIDO		SOMMER 4010, 4011, 4014 TX03-434-2, 4013 TX03-434-4, 4020 TX03-868-4, 4026 TX03-868-2, 4022 TX02-434-2, 4025 TX02-868-2, 4031 TX08-868-4			

WHY SYNC TECHNOLOGY

Close to the automation and before using the original remote control, press and hold pressed the button on the WHY EVO remote control until the LED starts to flash. Wait for the end of the flashing.

ACT ON THE RECEIVER

Close to the automation and before using the original remote control, press and hold pressed the PRG or PGM button in the receiver; then press the button of WHY EVO remote control.

DIRECT FUNCTIONING

Close to the automation and before using the original remote control, press the button of WHY EVO remote control for 4/5 times.

why EVO NEW

THE MULTIFREQUENCY REMOTE CONTROL



Sice Tech Srl

Via Berardo Maggi, 4 - 25124 Brescia (BS)

Tel. +39 02 45073682

Fax +39 02 45073683

for orders: sales@sicetech.it

www.sicetech.it - www.why-evo.com

Operative center:

Via Nedo Nadi, 7/A - 43122 Parma (PR)